


RENEWER OIL FOR FLOORS ULTRAMATTE

SPECIFICATION

	RENEWER OIL FOR OILED AND HARDWAX-OILED HARDWOOD FLOORS ULTRAMATTE
	BENEFITS : <ul style="list-style-type: none"> • Easy to use; • Allows to increase durability of the surface; • Restores the initial look of the flooring surface and creates a matte gloss; • Adds antistatic, soil and water resistant properties.
	INGREDIENTS : Natural oil, wax, desiccants, solvents

Meets the requirements of TY BY 101040134.002-2014 and Complies with Technical Regulation

DESCRIPTION AND APPLICATION :

Renewer oil for oiled and hardwax-oiled hardwood floors Ultramatte is a composition of natural oils with the addition of wax.

It is developed specifically for periodic renovation of hardwood flooring, furniture, stairs, wall panels finished with any oil-containing finishes (natural oils, hardwax-oil, UV-oil) and restoration of protective properties.

The oil creates a thin oil-soaked wear and tear resistant film on wooden surfaces. It gives a water- and soil-resistant features to the surface.


The renewer oil is used when the hardwood flooring surface looks too "dry" (rough) or a main finish was worn off due to the heavy loads.

Periods of renovation depend on type of the facility and its' loads:


Room type	Finish type	
	UV-Oil	Hardwax-oil
Living rooms	Once in 3-5 years	Once in 1-2 years
Public places	Low and average loads	Once in 1-2 months
	Heavy loads	Once in 2 – 3 weeks

APPLICATION :


PRELIMINARY WORKS :

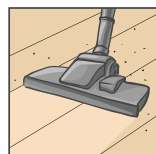

1. Clean the floor from dust and litter using a vacuum-cleaner.

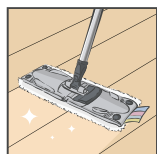

2. Clean the floor with the hardwood flooring cleaner. Avoid overwatering, after the cleaning the flooring has to be dry in 2-3 minutes.

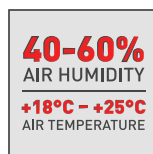

3. Recommended conditions of use: temperature +18°C to +25°C, relative air humidity 40 – 60 %. Good air flow during application and drying required

Important! Shake well before use. The product is ready to use and does not require dilution.

RENEWER OIL FOR FLOORS ULTRAMATTE

SPECIFICATION

MANUAL APPLICATION :



1. Apply the oil to a renovated flooring surface with a resin trowel, a brush with rough bristles or a simple brush. Distribute evenly.



2. When applied, rub the oil with clean, non-colored rags, remove the oil excess to avoid heavy stains and beads.



3. Remove excess oil with cotton cloth (prevent grease stains and beads).


AUTOMATIC APPLICATION :



1. Apply the oil to a renovated flooring surface with a resin trowel, a brush with rough bristles or a simple brush. Distribute evenly.



2. Remove excess oil with a cotton cloth (prevent grease stains and beads).

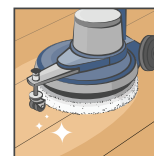

3. After the application, rub the oil using a single-disk white pad buffing machine.

Note: Hard to reach places (corners, seams, joints) must be treated with cotton cloth or a brush.

DRYING TIME :

For light loads (walking) – 12 hours in a well ventilated room. Time before using floors - not less than 24 hours. Maximum protective properties are reached in 7 days.

TOOLS CLEANING :

Tools and dry oil remains can easily be cleaned with white spirit.

SHELF LIFE, STORAGE AND TRANSPORTATION CONDITIONS :

12 months from the manufacture date, if package is intact. Keep tightly closed at temperature +5 °C to +25 °C. Keep container dry. Avoid direct sunlight and exposure to temperatures below +5 °C.

SAFETY REQUIREMENTS :

FLAMMABLE! For intended use only. Keep out of reach of children. Wear suitable rubber gloves when using the oil. Avoid contact with mucous membranes. If underventilated, use a respiratory protection. Do not inhale oil fumes. Avoid release to the environment. To avoid the risk of spontaneous combustion, oil-soaked rags should be stored in tightly closed metal containers or under a layer of water.

DISPOSAL :

Dispose of the preliminary water-soaked rags with oil remains in the tightly closed container.